



INSTALLATION INSTRUCTIONS


Accessory
SPLASH GUARDS
P/N 08P00-TP6-100

Application
2010 ACCORD CROSSTOUR


Publications No.
All 41975
Issue Date
NOV 2009

PARTS LIST


Left front splash guard

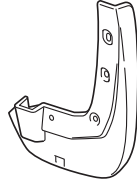


Right front splash guard

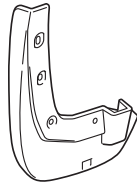


6 Self-tapping screws, 5 x 25 mm




Left rear splash guard

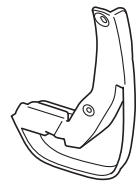

Right rear splash guard

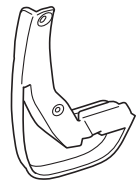

2 Self-tapping screws, 5 x 20 mm




TOOLS AND SUPPLIES REQUIRED

Stubby Phillips screwdriver

Pushpin

Illustration of the Splash Guards Installed on the Vehicle

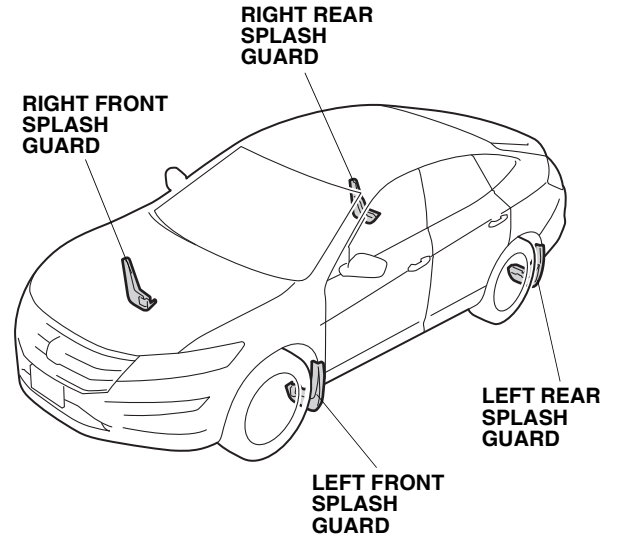


INSTALLATION

NOTE:


- These instructions show the left splash guards being installed. The same procedure applies to installing the right splash guards.
- Clean and wax the areas to be covered with a high-quality paste wax.
- The splash guards cannot be installed if the vehicle is equipped with a rear under spoiler.

Installing the Front Splash Guards

1. Turn the steering wheel fully counterclockwise.

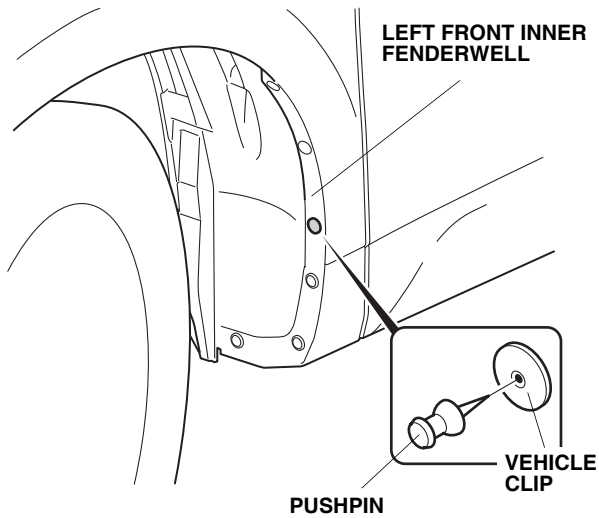


2. Using a pushpin, pierce the center of the vehicle clip in the left front inner fenderwell.
3. Remove three self-tapping screws from the left front inner fenderwell.

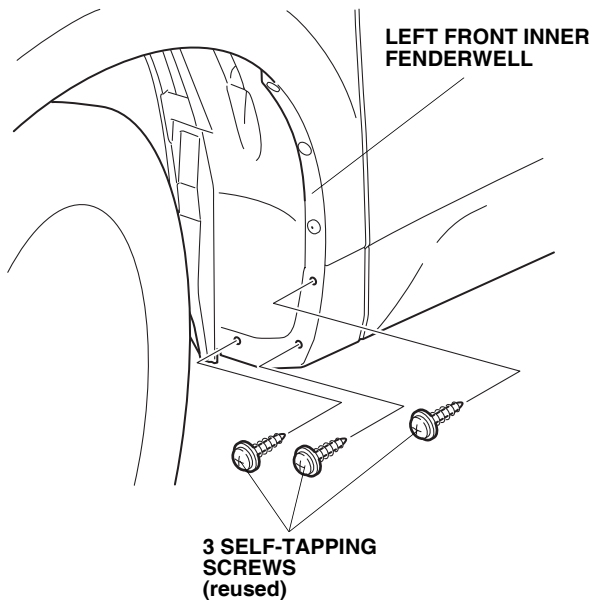

4. Secure the left front splash guard by tightening the three self-tapping screws (reused) and one 5 x 25 mm self-tapping screw (provided), in the order shown.


NOTE: Check there is no gap between the left front splash guard and the vehicle body. If there is a gap, loosen the three self-tapping screws, hold the splash guard against the body, and retighten the screws.

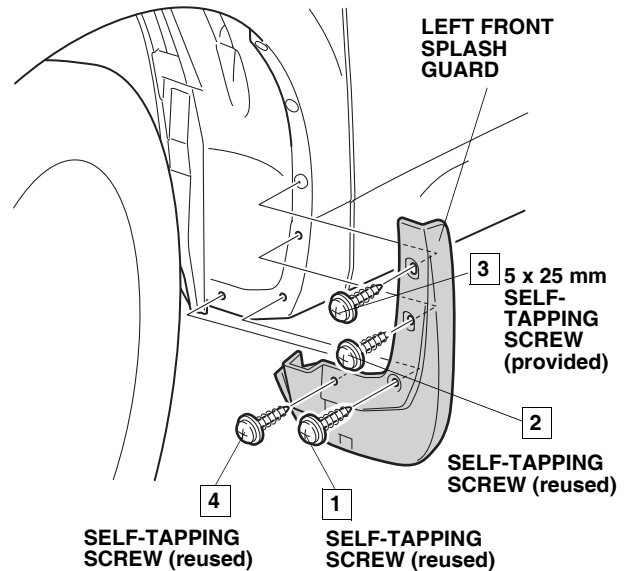

5. Turn the steering wheel fully clockwise and repeat steps 2 thru 4 to install the right front splash guard.


Installing the Rear Splash Guards

6. Remove and discard the three self-tapping screws from the left rear inner fenderwell.

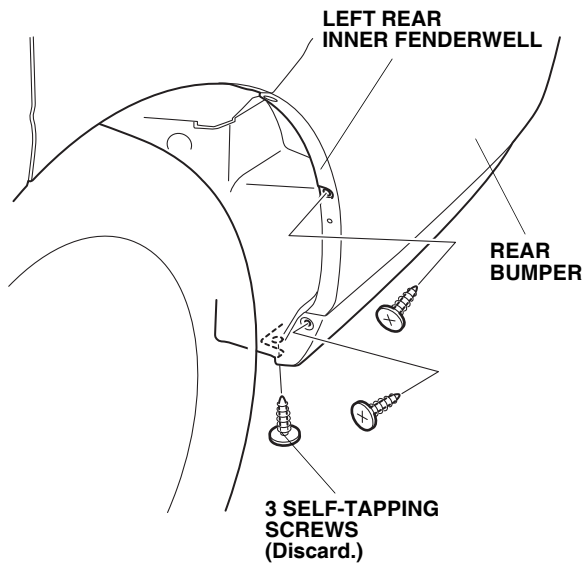

7. Secure the left rear splash guard with two 5 x 25 mm self-tapping screws and one 5 x 20 mm self-tapping screw, in the order shown.

NOTE: Check there is no gap or flapping between the left rear splash guard and the vehicle body. If there is a gap, loosen the three self-tapping screws, hold the splash guard against the body, and retighten the screws.

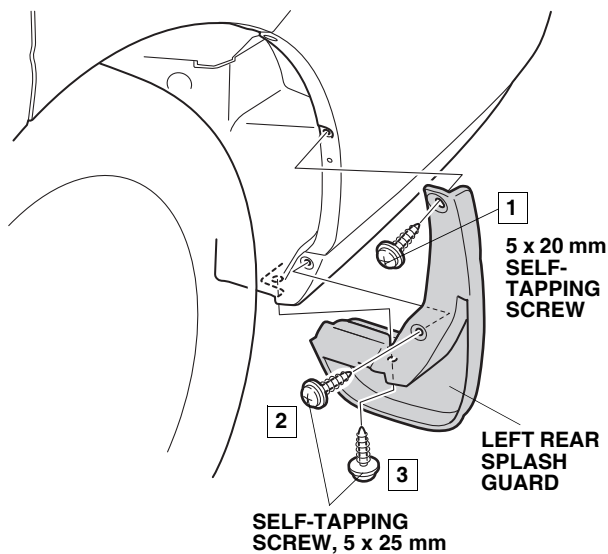

8. Repeat steps 6 and 7 to install the right rear splash guard.